

EC2x&EG9x&EM05 PPP

Application Note

LTE Module Series

Rev. EC2x&EG9x&EM05_PPP_Application_Note_V1.0

Date: 2017-12-08

Status: Released



Our aim is to provide customers with timely and comprehensive service. For any assistance, please contact our company headquarters:

Quectel Wireless Solutions Co., Ltd.

7th Floor, Hongye Building, No.1801 Hongmei Road, Xuhui District, Shanghai 200233, China

Tel: +86 21 5108 6236

Email: info@quectel.com

Or our local office. For more information, please visit:

<http://quectel.com/support/sales.htm>

For technical support, or to report documentation errors, please visit:

<http://quectel.com/support/technical.htm>

Or email to: support@quectel.com

GENERAL NOTES

QUECTEL OFFERS THE INFORMATION AS A SERVICE TO ITS CUSTOMERS. THE INFORMATION PROVIDED IS BASED UPON CUSTOMERS' REQUIREMENTS. QUECTEL MAKES EVERY EFFORT TO ENSURE THE QUALITY OF THE INFORMATION IT MAKES AVAILABLE. QUECTEL DOES NOT MAKE ANY WARRANTY AS TO THE INFORMATION CONTAINED HEREIN, AND DOES NOT ACCEPT ANY LIABILITY FOR ANY INJURY, LOSS OR DAMAGE OF ANY KIND INCURRED BY USE OF OR RELIANCE UPON THE INFORMATION. ALL INFORMATION SUPPLIED HEREIN IS SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

COPYRIGHT

THE INFORMATION CONTAINED HERE IS PROPRIETARY TECHNICAL INFORMATION OF QUECTEL WIRELESS SOLUTIONS CO., LTD. TRANSMITTING, REPRODUCTION, DISSEMINATION AND EDITING OF THIS DOCUMENT AS WELL AS UTILIZATION OF THE CONTENT ARE FORBIDDEN WITHOUT PERMISSION. OFFENDERS WILL BE HELD LIABLE FOR PAYMENT OF DAMAGES. ALL RIGHTS ARE RESERVED IN THE EVENT OF A PATENT GRANT OR REGISTRATION OF A UTILITY MODEL OR DESIGN.

Copyright © Quectel Wireless Solutions Co., Ltd. 2017. All rights reserved.

About the Document

History

Revision	Date	Author	Description
1.0	2017-12-08	Duke XIN/ Shirly WANG	Initial

Contents

About the Document.....	2
Contents	3
Table Index.....	4
Figure Index	5
1 Introduction	6
2 Application Mode	7
3 Procedures for PPP Setup and Termination.....	8
3.1. General Procedures for PPP Setup.....	8
3.2. Recommended Procedures for PPP Setup	9
3.3. Procedures for PPP Termination.....	10
4 Modes for PPP Connection.....	11
4.1. Data Mode and Command Mode.....	11
4.1.1. Switch from Data Mode to Command Mode.....	11
4.1.1.1. Change DTR Level to Switch from Data Mode to Command Mode	11
4.1.1.2. Use Sequence +++ to Switch from Data Mode to Command Mode	11
4.1.2. Switch from Command Mode to Data Mode.....	12
4.1.2.1. Use ATO to Switch from Command Mode to Data Mode.....	12
4.2. Handle URC in Data Mode	12
4.3. Data Carrier Detection (DCD) Mode.....	12
5 PPP Dial-up Operation.....	13
5.1. Preparation.....	13
5.2. Modem Configuration.....	13
5.2.1. Add a New Modem.....	13
5.2.2. Configure the Modem Driver.....	18
5.3. Dial-up Network Configuration.....	19
5.3.1. Create a New Connection.....	19
5.3.2. Configure the Connection	21
5.3.3. Configure the Dial-up Tool.....	22
5.3.4. Establish the Dial-up Connection.....	23
6 Appendix A References.....	24

Table Index

TABLE 1: RELATED DOCUMENTS	24
TABLE 2: TERMS AND ABBREVIATIONS	24

Figure Index

FIGURE 1: PPP APPLICATION MODE.....	7
FIGURE 2: GENERAL PROCEDURES FOR PPP SETUP.....	8
FIGURE 3: FLOWCHART OF RECOMMENDED PROCEDURES FOR PPP SETUP	9
FIGURE 4: PHONE AND MODEM OPTIONS ICON IN CONTROL PANEL.....	14
FIGURE 5: ADD A NEW MODEM	15
FIGURE 6: SELECT MODEL OF THE MODEM	16
FIGURE 7: SELECT A PORT	17
FIGURE 8: INSTALLED SUCCESSFULLY	17
FIGURE 9: CONFIGURE THE MODEM DRIVER.....	18
FIGURE 10: CREATE A NEW CONNECTION	19
FIGURE 11: SET UP THE NEW CONNECTION.....	20
FIGURE 12: CONFIGURE THE CONNECTION.....	21
FIGURE 13: CONFIGURE THE DIAL-UP TOOL	22
FIGURE 14: ESTABLISH THE DIAL-UP CONNECTION.....	23

1 Introduction

This document gives a brief introduction on the PPP function of Quectel EC2x&EG9x&EM05 modules, including application mode, procedures for PPP setup and termination, modes for PPP connection, and examples for PPP dial-up, etc.

This document is applicable to following Quectel modules.

- EC2x (including EC25, EC21, EC20 R2.0 and EC20 R2.1)
- EG9x (including EG91 and EG95)
- EM05

2 Application Mode

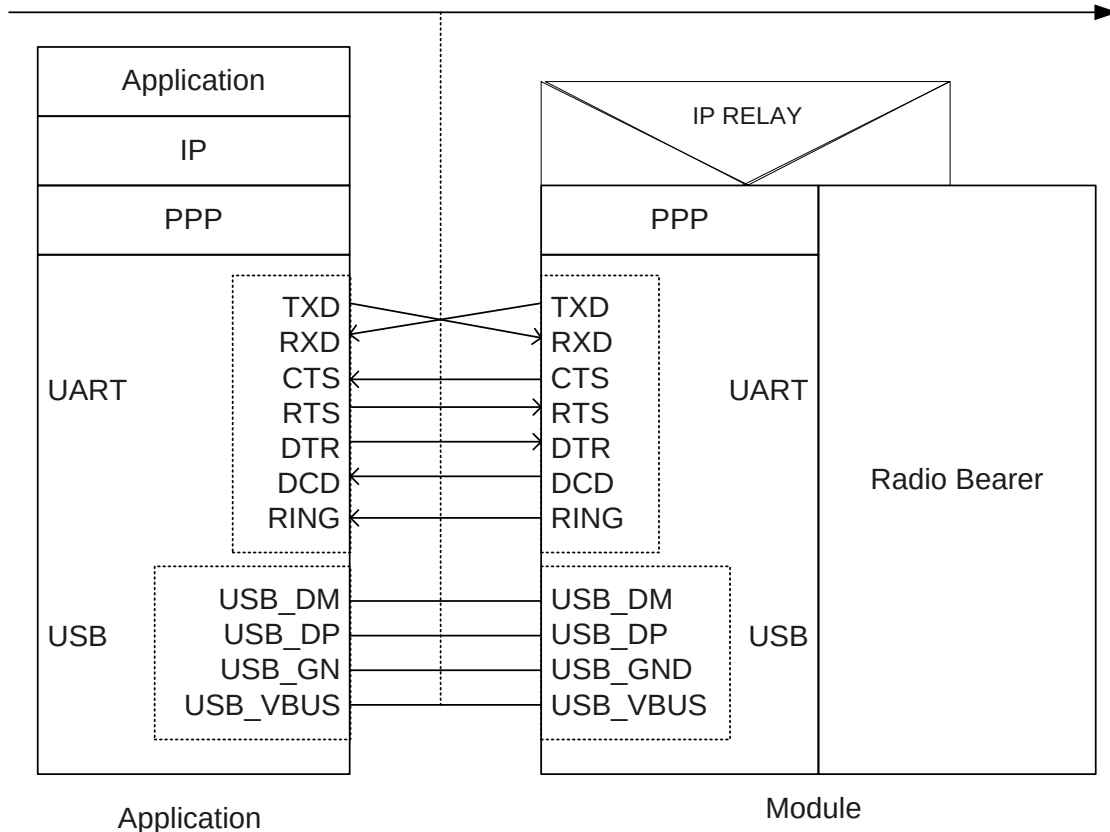


Figure 1: PPP Application Mode

The usage of PPP (Point-to-Point Protocol) is illustrated in the above figure. Either UART or USB can be used for PPP connection. The module provides a PPP server for application, and the application side provides a PPP client for the module. Meanwhile, the application side has to provide protocols such as TCP/IP, HTTP(S), etc. When PPP connection has been set up, the IP packet flow from the application side will be transmitted to Internet through the module.

Most standard operating systems (e.g. Windows, Unix/Linux) include the PPP protocol stack. For other operating systems which do not have existing application to set up PPP connection, it is very important to develop applicable application software to accomplish PPP connection first.

3 Procedures for PPP Setup and Termination

This chapter describes the PPP setup and termination procedures for modules. If PPP application software is intended to be developed, please read this chapter before programming.

3.1. General Procedures for PPP Setup

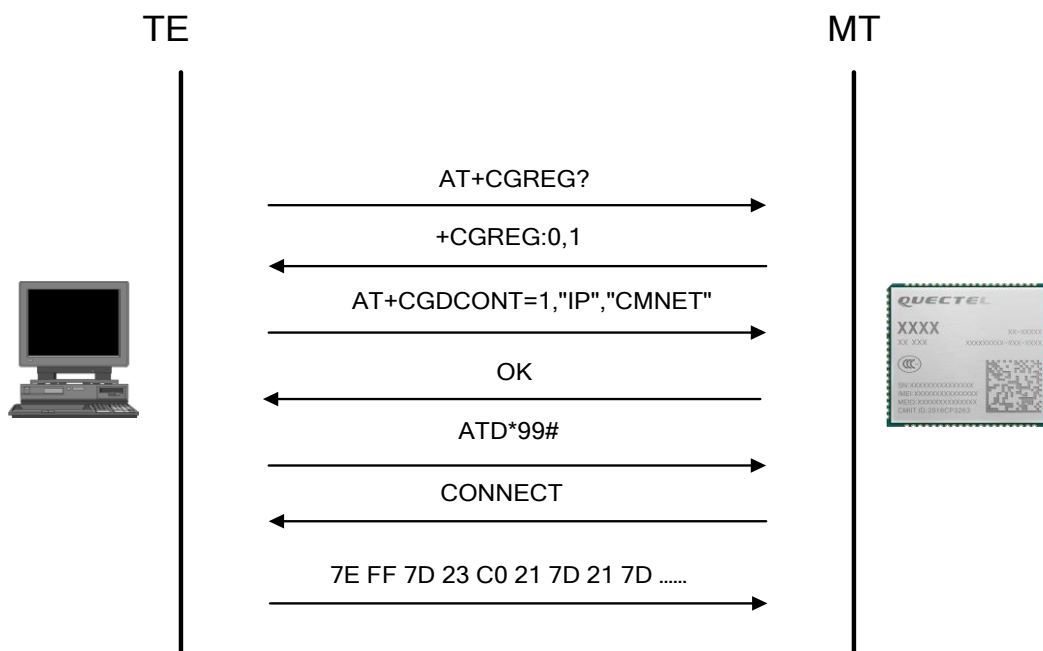


Figure 2: General Procedures for PPP Setup

After the module has registered on GPRS network, please set APN for PPP by **AT+CGDCONT** and start PPP by **ATD*99#**. When **ATD*99#** is executed, the module enters into the procedure of PPP frame interaction which is carried out on the basis of standard Point-to-Point Protocol. Description about the module's packet interaction is included in the figure below. Please get more details about standard Point-to-Point Protocol from *RFC 1661*.

3.2. Recommended Procedures for PPP Setup

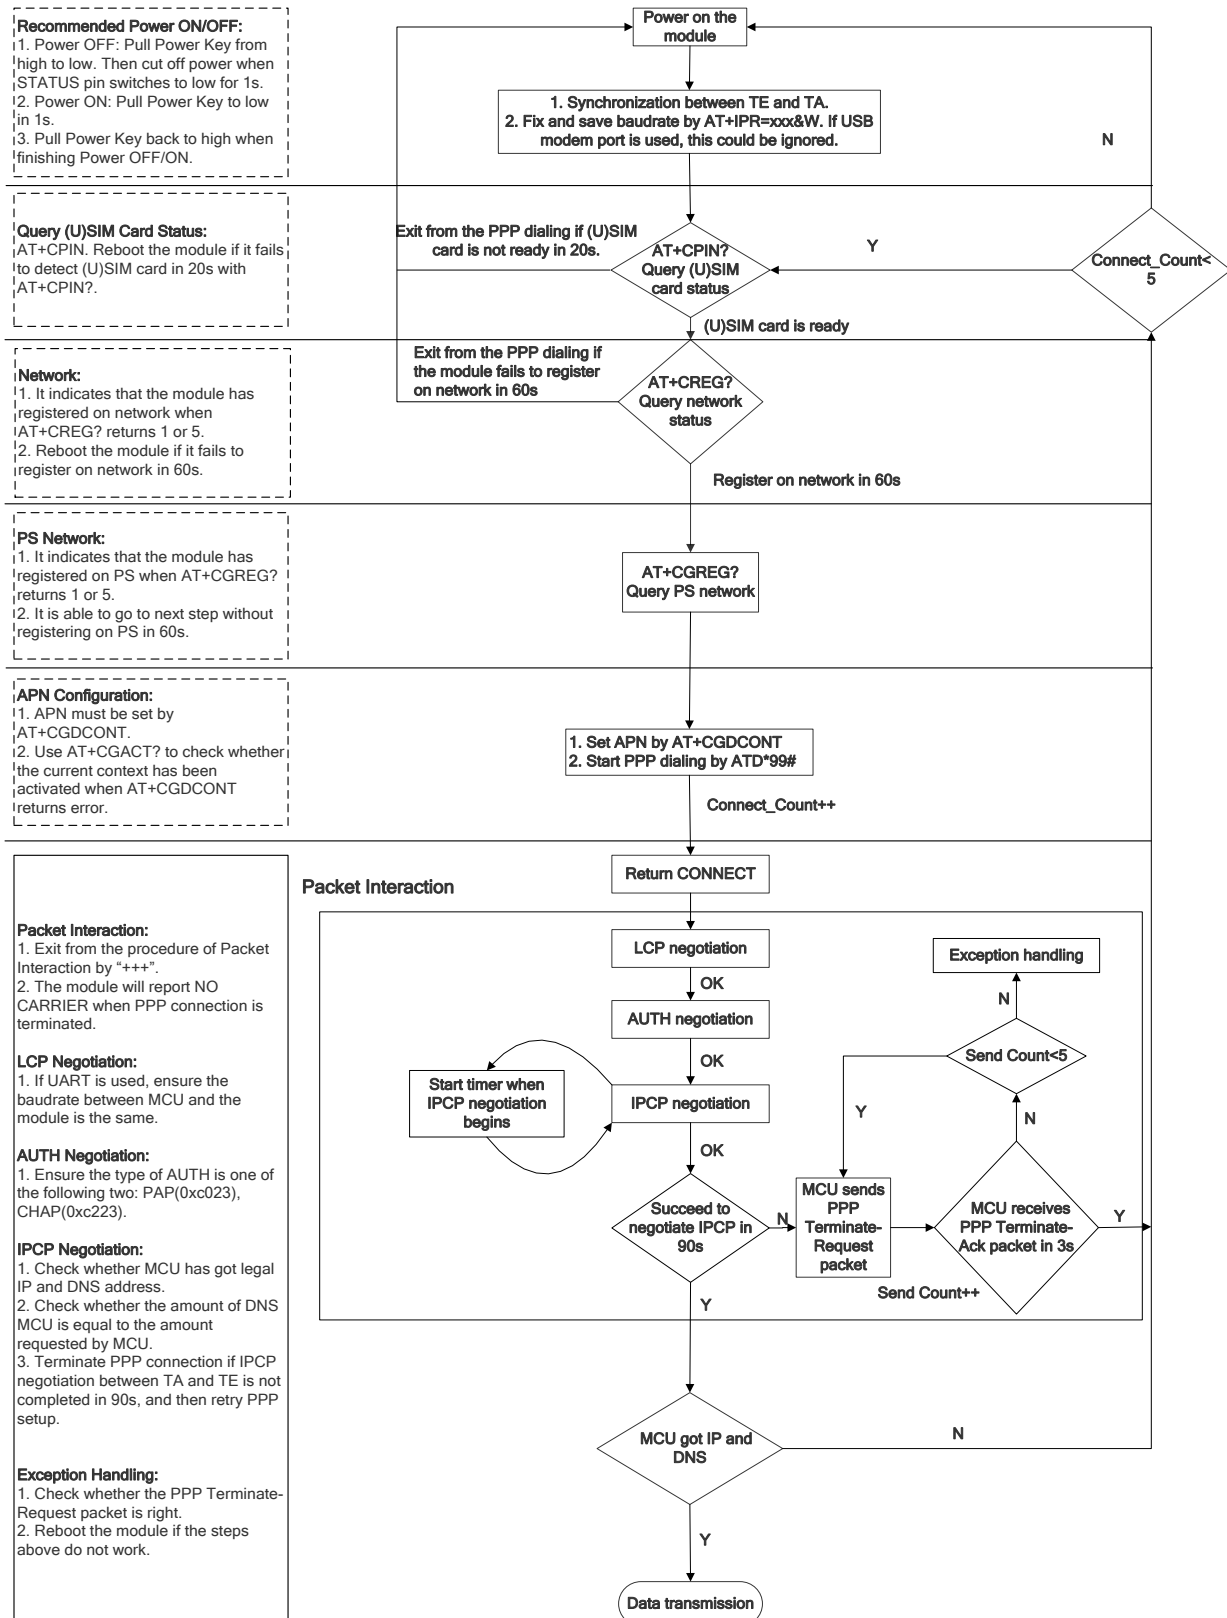


Figure 3: Flowchart of Recommended Procedures for PPP Setup

When the module is powered on, if the main UART is used, baud rate of the UART should be fixed by **AT+IPR=xxx;&W**. Before using **ATD*99#** to set up PPP, the status of (U)SIM card must be checked via **AT+CPIN?**. When (U)SIM card is ready, please check the network registration status periodically via **AT+CREG?** and **AT+CGREG?** until the network condition is prepared.

NOTES

1. Please ensure MCU and the module are synchronized successfully after rebooting the module. MCU sends **AT<CR><LF>** to the module every 100ms until **OK** is received from the module. If the UART is used, MCU fixes and saves baud rate via **AT+IPR=xxx;&W** after successful synchronization.
2. Please note that MCU has to wait for the response (for example **OK**, **CME error**, **CMS error**) to the previous AT command before inputting the next AT command. The module can be rebooted if there is no response in 60s.
3. It is strongly recommended that do NOT power on/off the module frequently. If the dial-up retry is failed for 3 times continuously, the module could be powered off/on (reset) immediately for the first time. After that, if the dial-up retry still fails, reset the module for the second time after 10 minutes, the third time after 30 minutes, and the fourth time after one hour.
4. If MCU fails to transmit data to network after PPP connection has been set up, please check the configuration of PPP and the state of network, and then reboot the module.
5. If the module has registered on CDMA network, please do NOT use **ATD#777** command to set up PPP. **ATD*99#** command should be used.

3.3. Procedures for PPP Termination

It is recommended to terminate the connection with LCP Terminate-Request message in PPP. This method must be operated in data mode.

TA can also terminate the connection by changing the DTR level. Please set DTR function by **AT&D2** first. This method must be operated in data mode as well.

Example

//USB/UART port is still in command mode before PPP connection has been setup.

AT&D2

OK

When PPP dial-up is already existing, change the DTR level from low to high, and the data connection will be terminated automatically. USB/UART port will enter into command mode after PPP connection is terminated completely.

4 Modes for PPP Connection

4.1. Data Mode and Command Mode

The module communicates information (including AT commands and data) with application via USB/UART port. There are two working modes for the two ports: data mode and command mode.

The ports are in command mode before PPP is set up, and the module can execute AT commands in this state. When PPP negotiation is started, the ports will enter into data mode, and will keep in this mode when PPP connection is set up. In data mode, the module cannot execute AT commands.

Quectel EC2x&EG9x&EM05 modules provide convenient methods to switch between the two modes.

4.1.1. Switch from Data Mode to Command Mode

4.1.1.1. Change DTR Level to Switch from Data Mode to Command Mode

When PPP connection is already existed and the USB/UART port is in data mode, the ports can be switched to command mode by changing DTR level from low to high (**AT&D1** should be set first). The module will return **OK** when switched to command mode successfully.

4.1.1.2. Use Sequence +++ to Switch from Data Mode to Command Mode

The other way to switch USB/UART port from data mode to command mode is using sequence “+++” when PPP connection has been set up successfully. To prevent the “+++” escape sequence from being misinterpreted as data, the following sequence should be followed:

- 1) Do not input any character within 1s or longer before inputting “+++”.
- 2) Input “+++” within 1s, and no other characters can be inputted during the time.
- 3) Do not input any character within 1s after “+++” has been inputted.

When such particular sequence “+++” is received, the USB/UART port will switch from data mode to command mode, and the module will return **OK** for the operation.

NOTE

Please make sure the above operations are performed after completion of PPP negotiation. If not, above operations will terminate the PPP negotiation and make USB/UART port quit from data mode. When USB/UART port is switched to command mode after accomplishing PPP negotiation, the data will be treated as AT command and the module still remains PPP connection.

4.1.2. Switch from Command Mode to Data Mode

4.1.2.1. Use ATO to Switch from Command Mode to Data Mode

Example

//When PPP connection exists, and USB/UART port is in command mode.

ATO

CONNECT 150000000

//Indicates that TA has entered into data mode, and all data inputted from USB/UART port will be treated as PPP frames.

4.2. Handle URC in Data Mode

The URC for incoming calls and short messages will not be reported to the PPP dial-up port in data mode during PPP connection. But the level of module's RI pin will change from high to low for 120ms as an indication. According to the RI pin status, MCU can switch the port to command mode to process the call or short message. After switching to command mode, the URC will be reported to the port if the incoming call or short message still exists.

4.3. Data Carrier Detection (DCD) Mode

DCD mode is determined by **AT&C**. If **AT&C0** is set, the DCD pin will not be used to indicate the data carrier status. If **AT&C1** is set, the DCD pin will be used to indicate the data carrier status. The pin will keep at low level when data carrier exists or PPP negotiation begins, otherwise it will keep at high level.

NOTE

When switching module's USB/UART port from data mode to command mode (using "+++"), the DCD state does not change.

5 PPP Dial-up Operation

This chapter mainly introduces how to establish PPP dial-up in Windows system. For detailed operation in Linux, please refer to *Quectel_WCDMA<E_Linux_USB_Driver_User_Guide*.

5.1. Preparation

It is necessary to finish the following steps before establishing a PPP dial-up connection in Windows.

1. Connect the module to PC and enter the PIN code if the (U)SIM card PIN is locked.
2. Make sure the (U)SIM card can successfully register on GPRS network.

5.2. Modem Configuration

5.2.1. Add a New Modem

If there is no **Standard 19200 bps Modem** been installed, a new standard modem needs to be added to the modem section of the control panel.

1. Click button “Start” → “Settings” → “Control Panel” → “Phone and Modem Options”, as shown in the following figure.

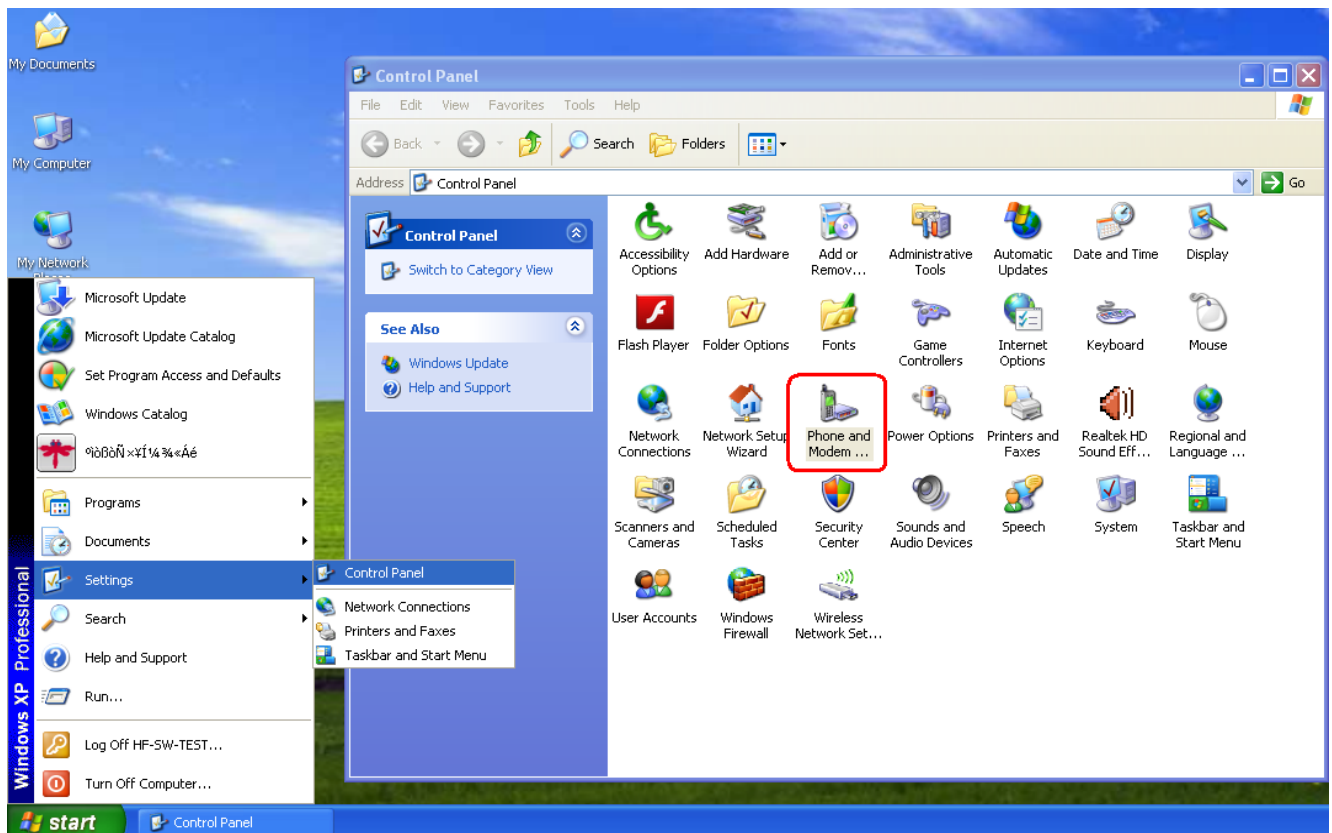


Figure 4: Phone and Modem Options Icon in Control Panel

- Double click “Phone and Modem Options”, and select “Modems” → “Add...” to add a new modem, as shown in the following figure.

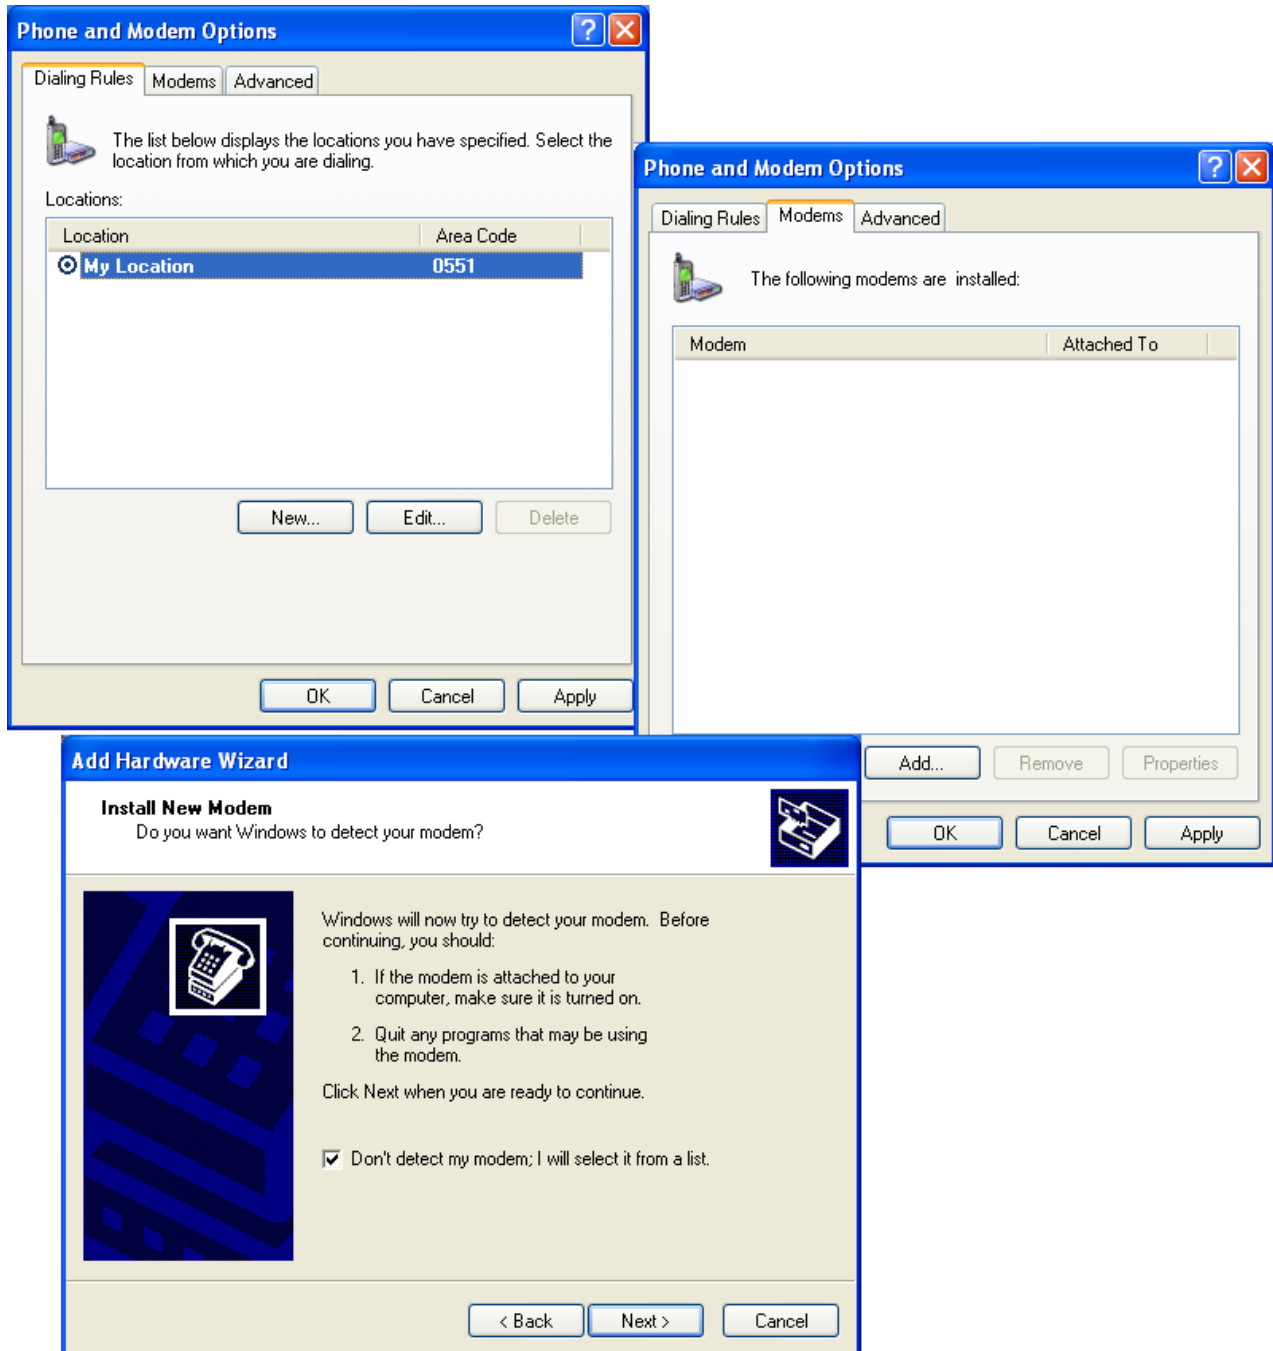


Figure 5: Add a New Modem

3. Install the new modem according to the instructions on the screen: select “**Standard 19200 bps Modem**” and a port (“**COM3**”) which will be installed; click “**Next**” button, till the configuration is finished. Refer to the following three figures for details.

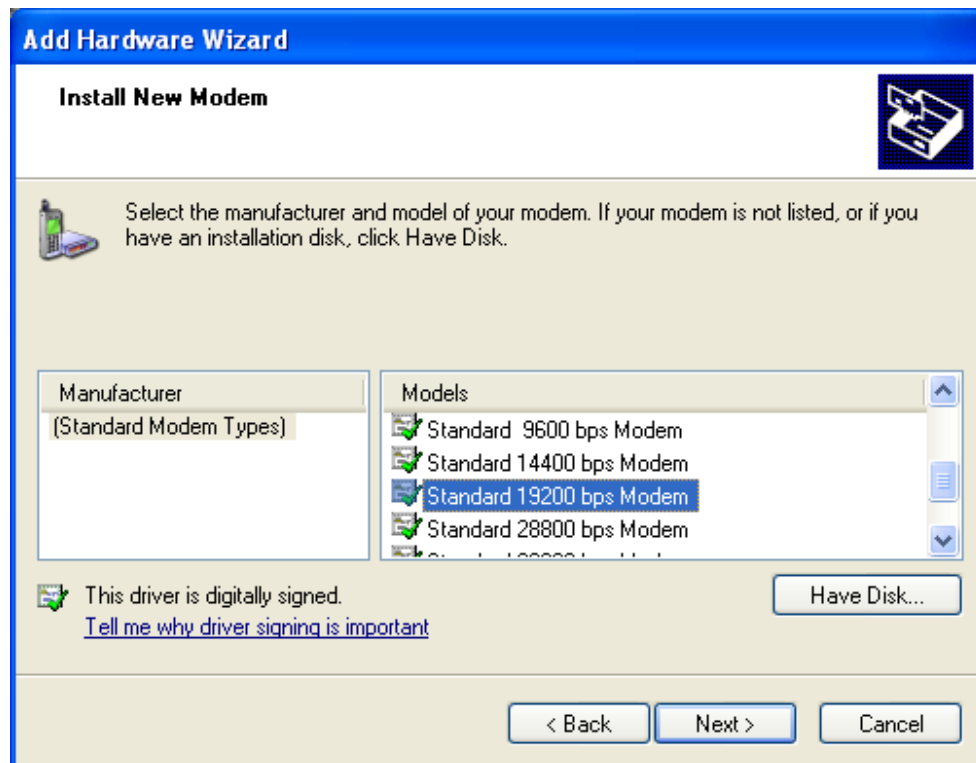


Figure 6: Select Model of the Modem

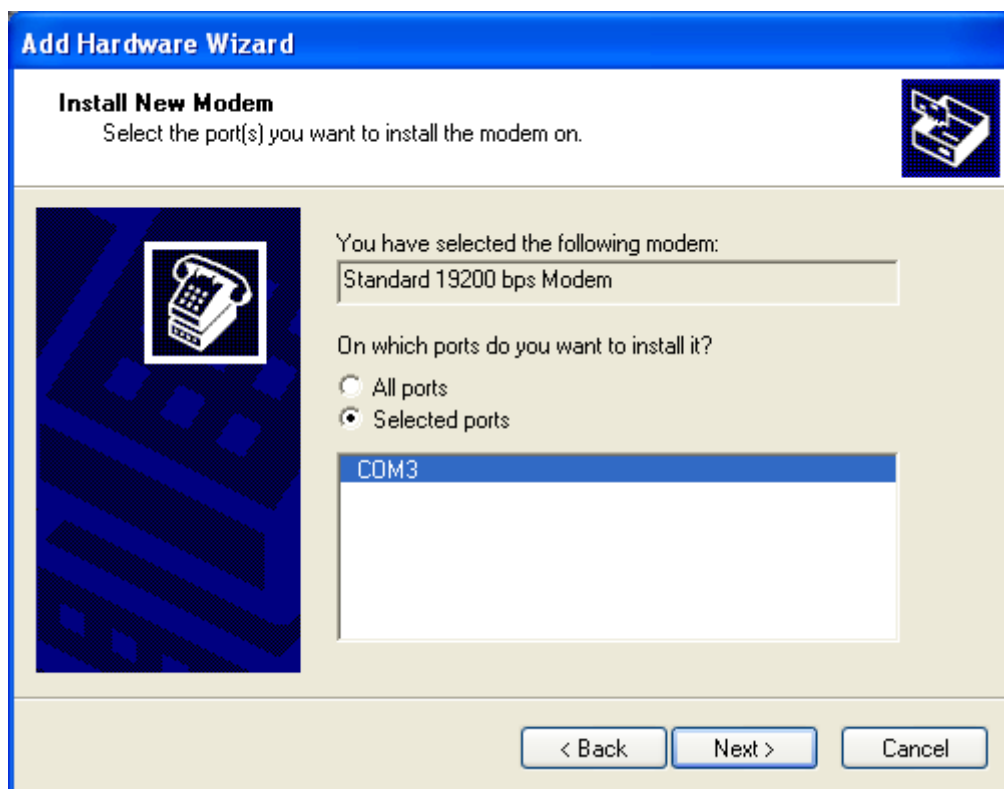


Figure 7: Select a Port

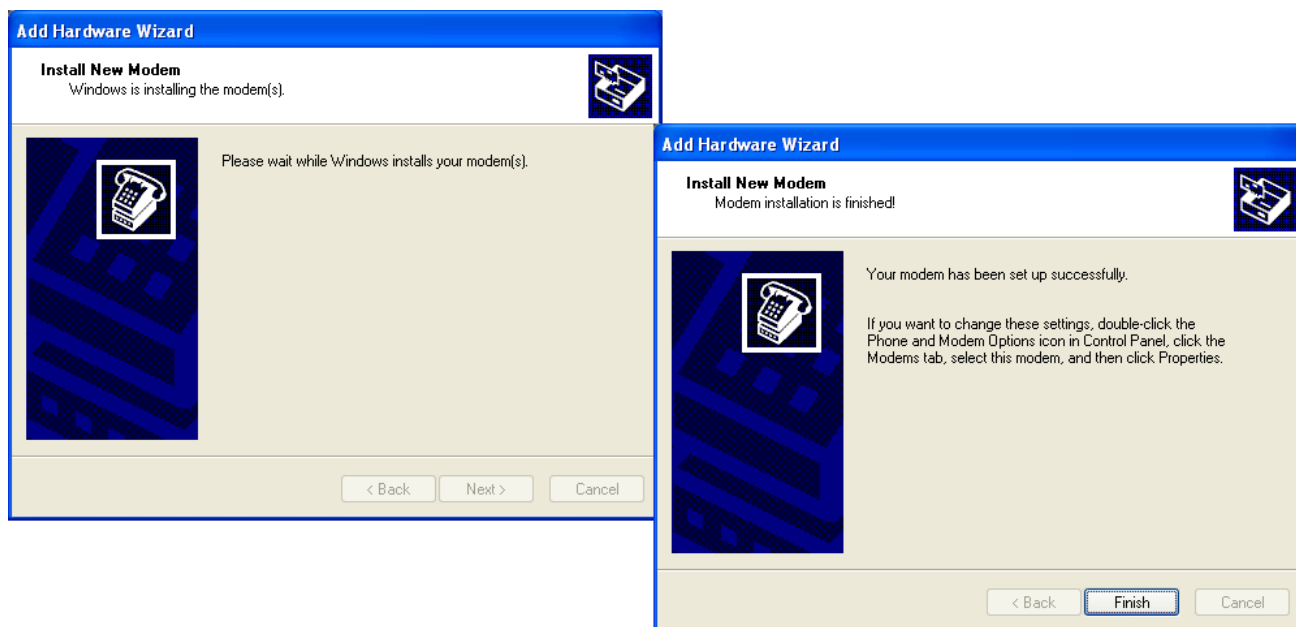


Figure 8: Installed Successfully

5.2.2. Configure the Modem Driver

Select the “**Standard 19200 bps Modem**” which has been installed; click “**Properties**” button; choose “**Maximum Port Speed**” as “**115200**” (default value); click “**Advanced**” to configure “**Extra Settings**”; and then input **AT+CGDCONT=1,"IP","CMNET"** command, as illustrated below.

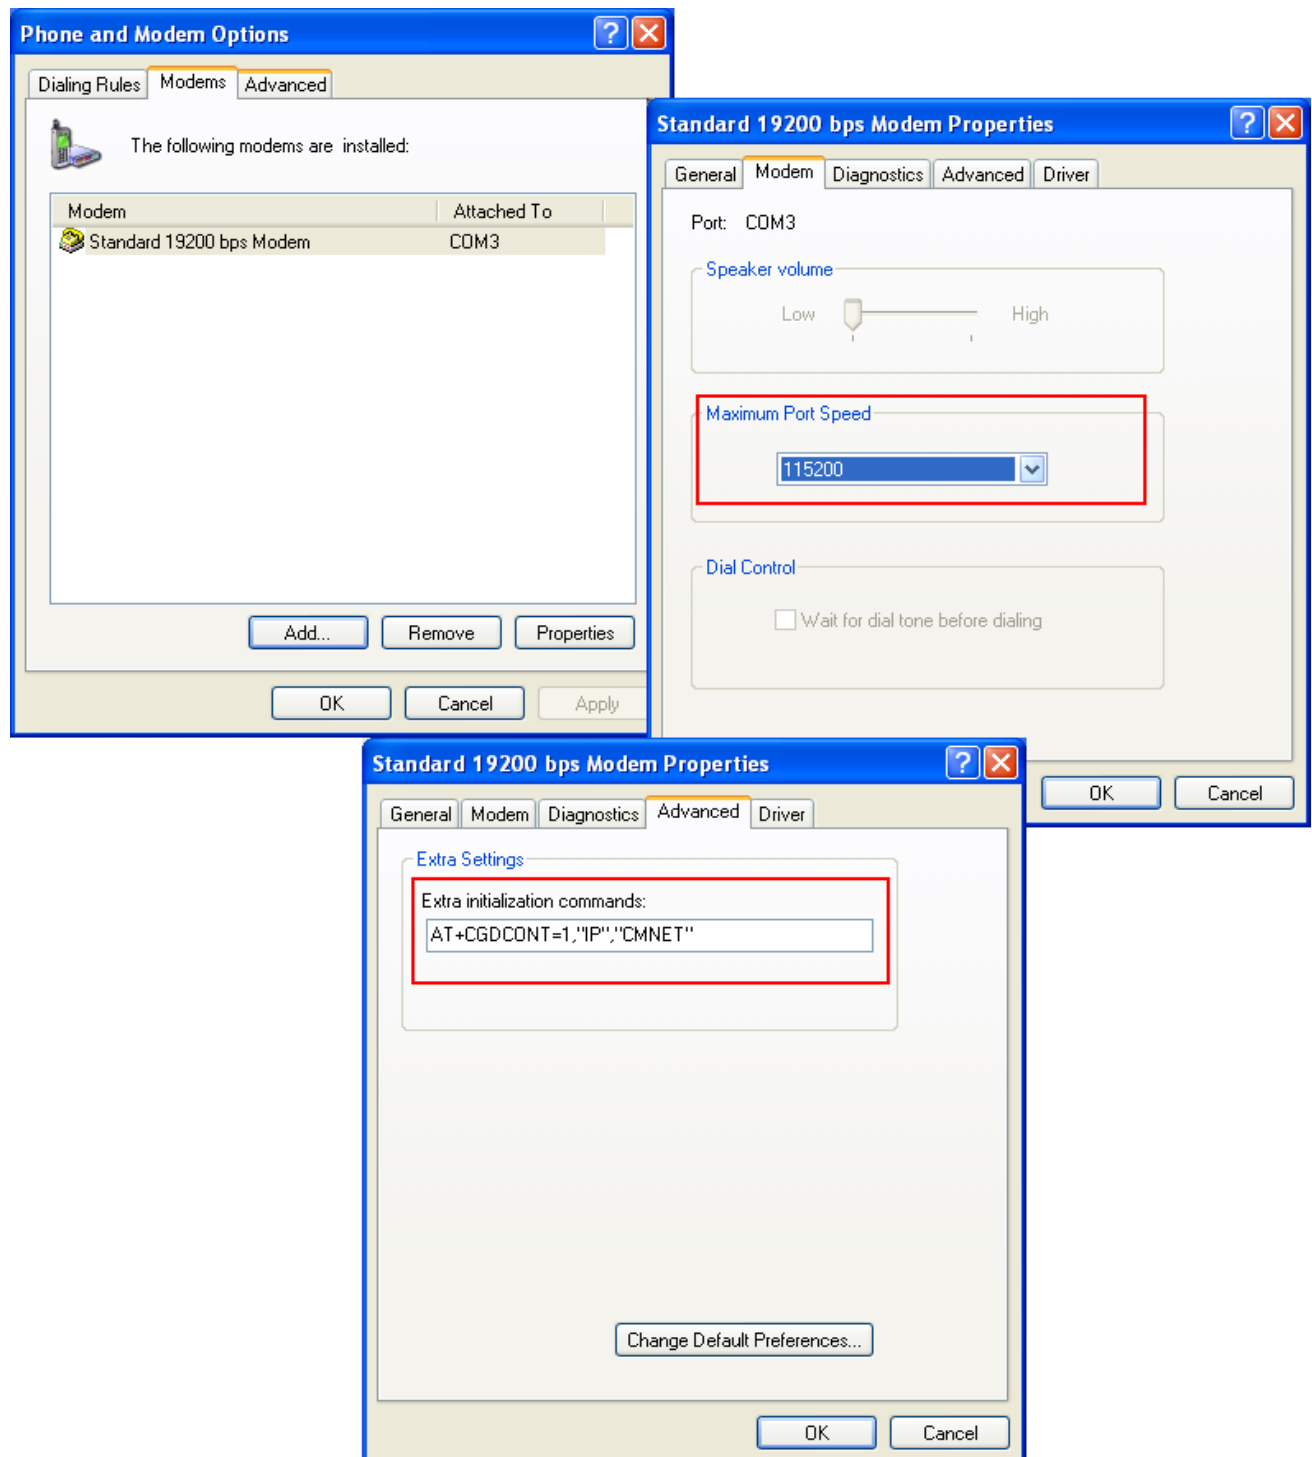


Figure 9: Configure the Modem Driver

NOTE

In the example above, the settings predefine a PDP context whose CID=1, PDP type=IP and APN=CMNET. CMNET is the APN for the network provider China Mobile and it should be replaced with the value provided by customers' actual network provider.

5.3. Dial-up Network Configuration

5.3.1. Create a New Connection

1. Open “Control Panel” and double click “Network Connections”, and then click “Create a new connection” from the right list of “Network Tasks”, as illustrated below.

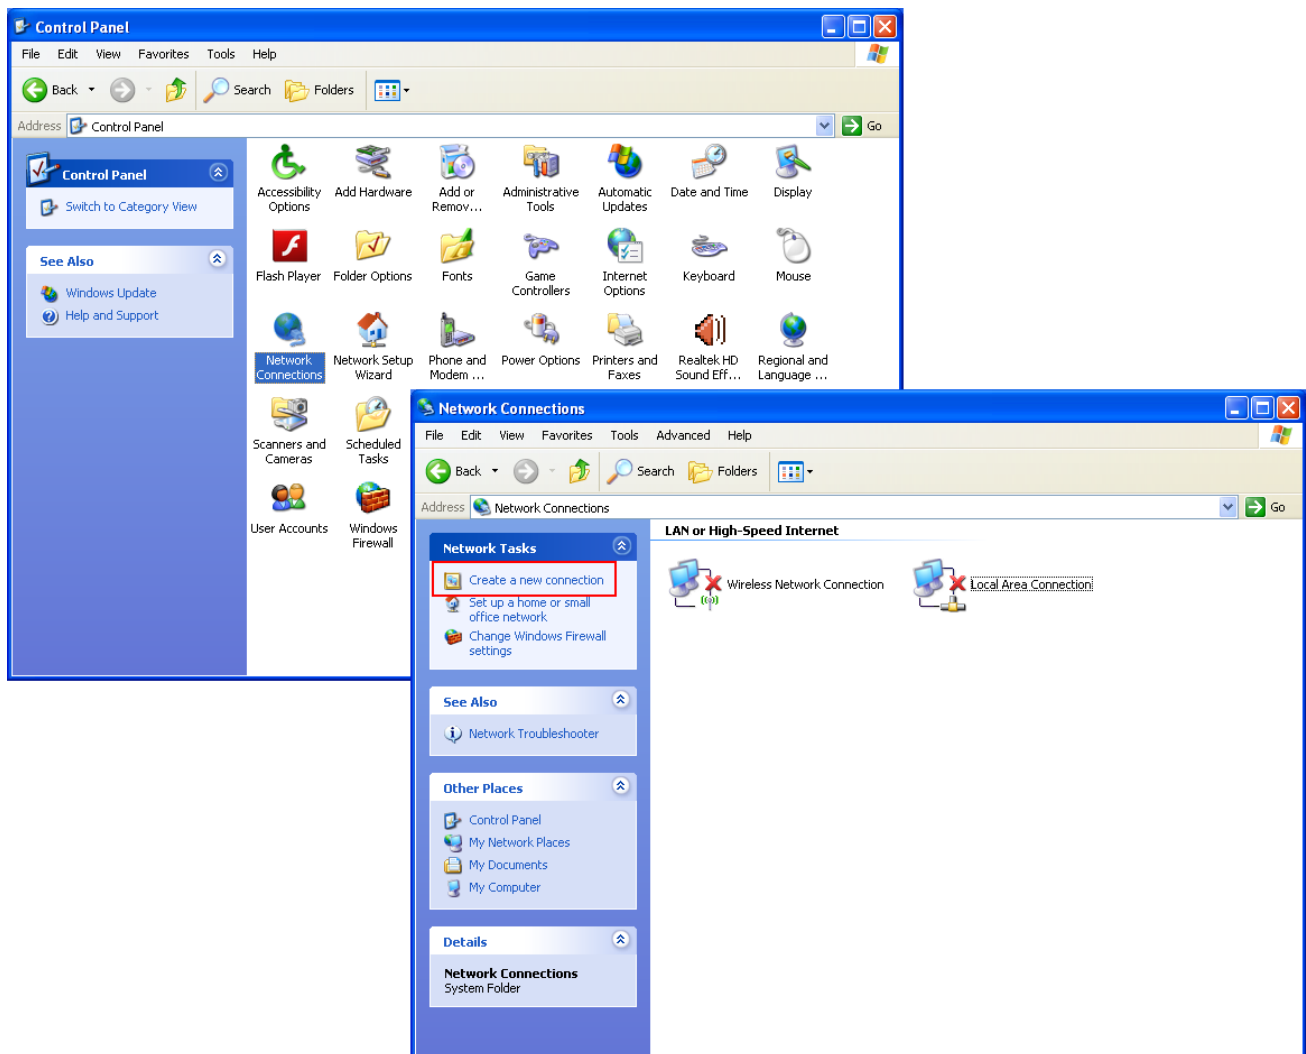


Figure 10: Create a New Connection

2. Click “Next” button and choose “Connect to the network at my workplace” → “Next”, and then select “Dial-up connection”, as illustrated in the following figure.

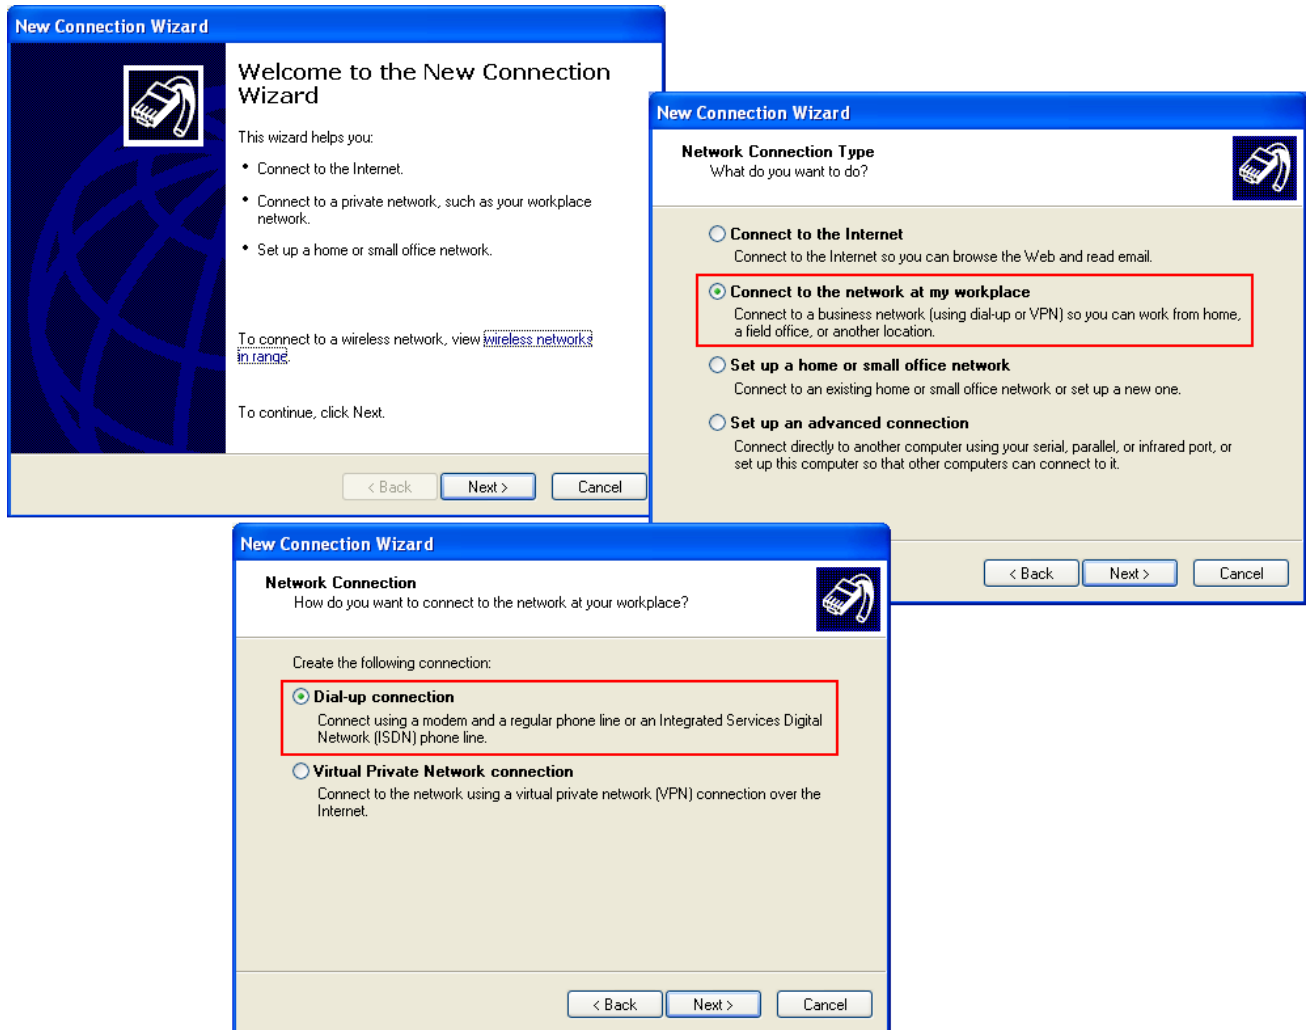


Figure 11: Set up the New Connection

5.3.2. Configure the Connection

Enter word (for example “test”) in “Company Name” as the connection name, and then click “Next” button and enter number (for example “*99#”) in “Phone number”, as illustrated below.

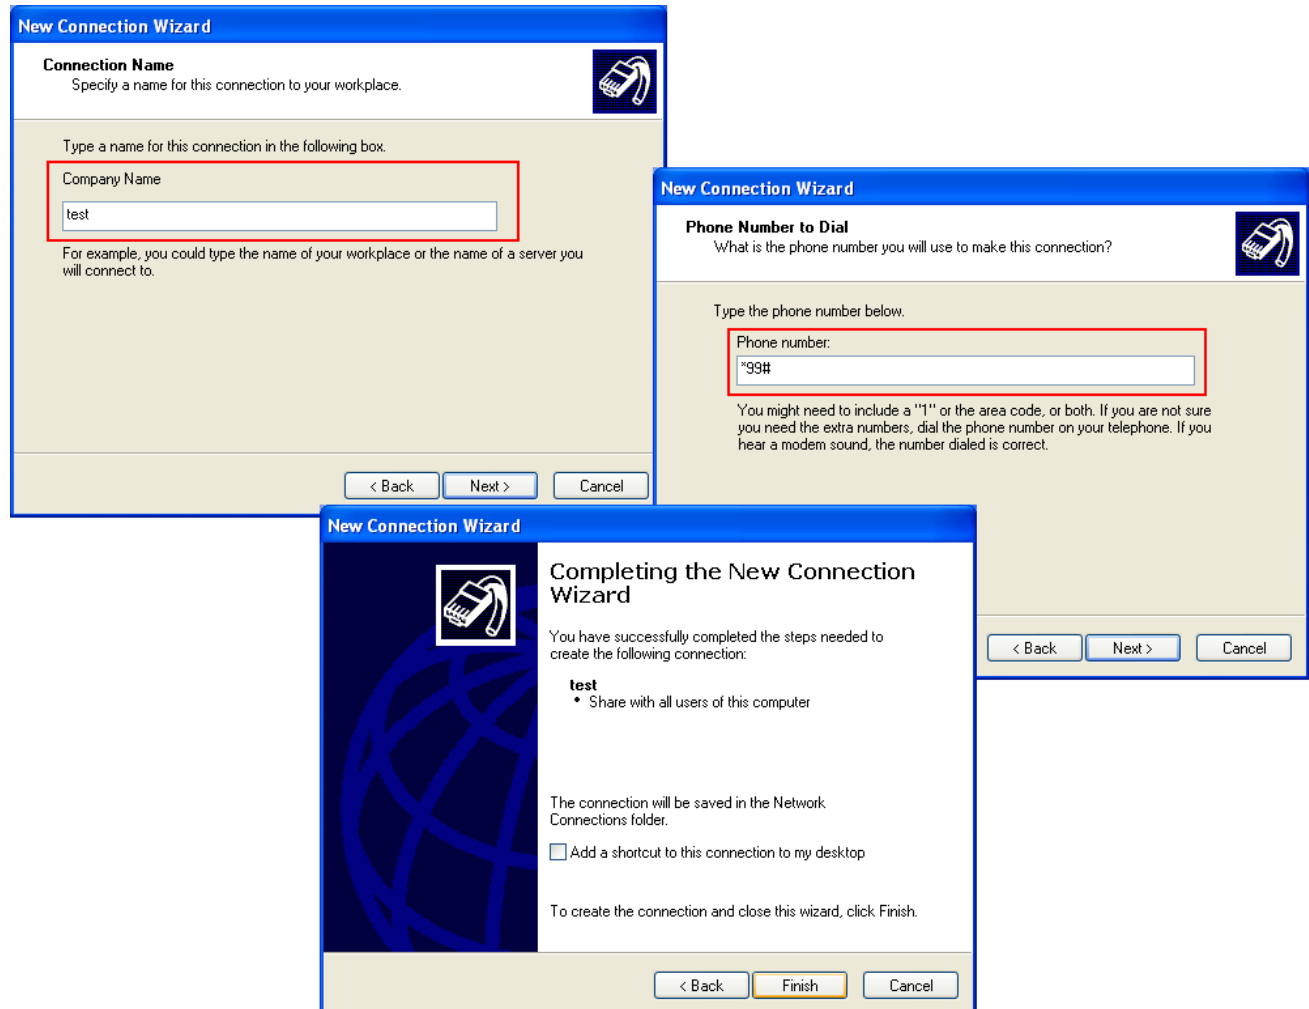


Figure 12: Configure the Connection

5.3.3. Configure the Dial-up Tool

Click “**Properties**” button from the popup window. Then click “**Configure...**” button to configure the “**Standard 19200 bps Modem**”. And finally select “**115200**” from the drop-down list of “**Maximum speed**”. Click “**OK**” button to finish the configuration. Refer to the following figure for details.

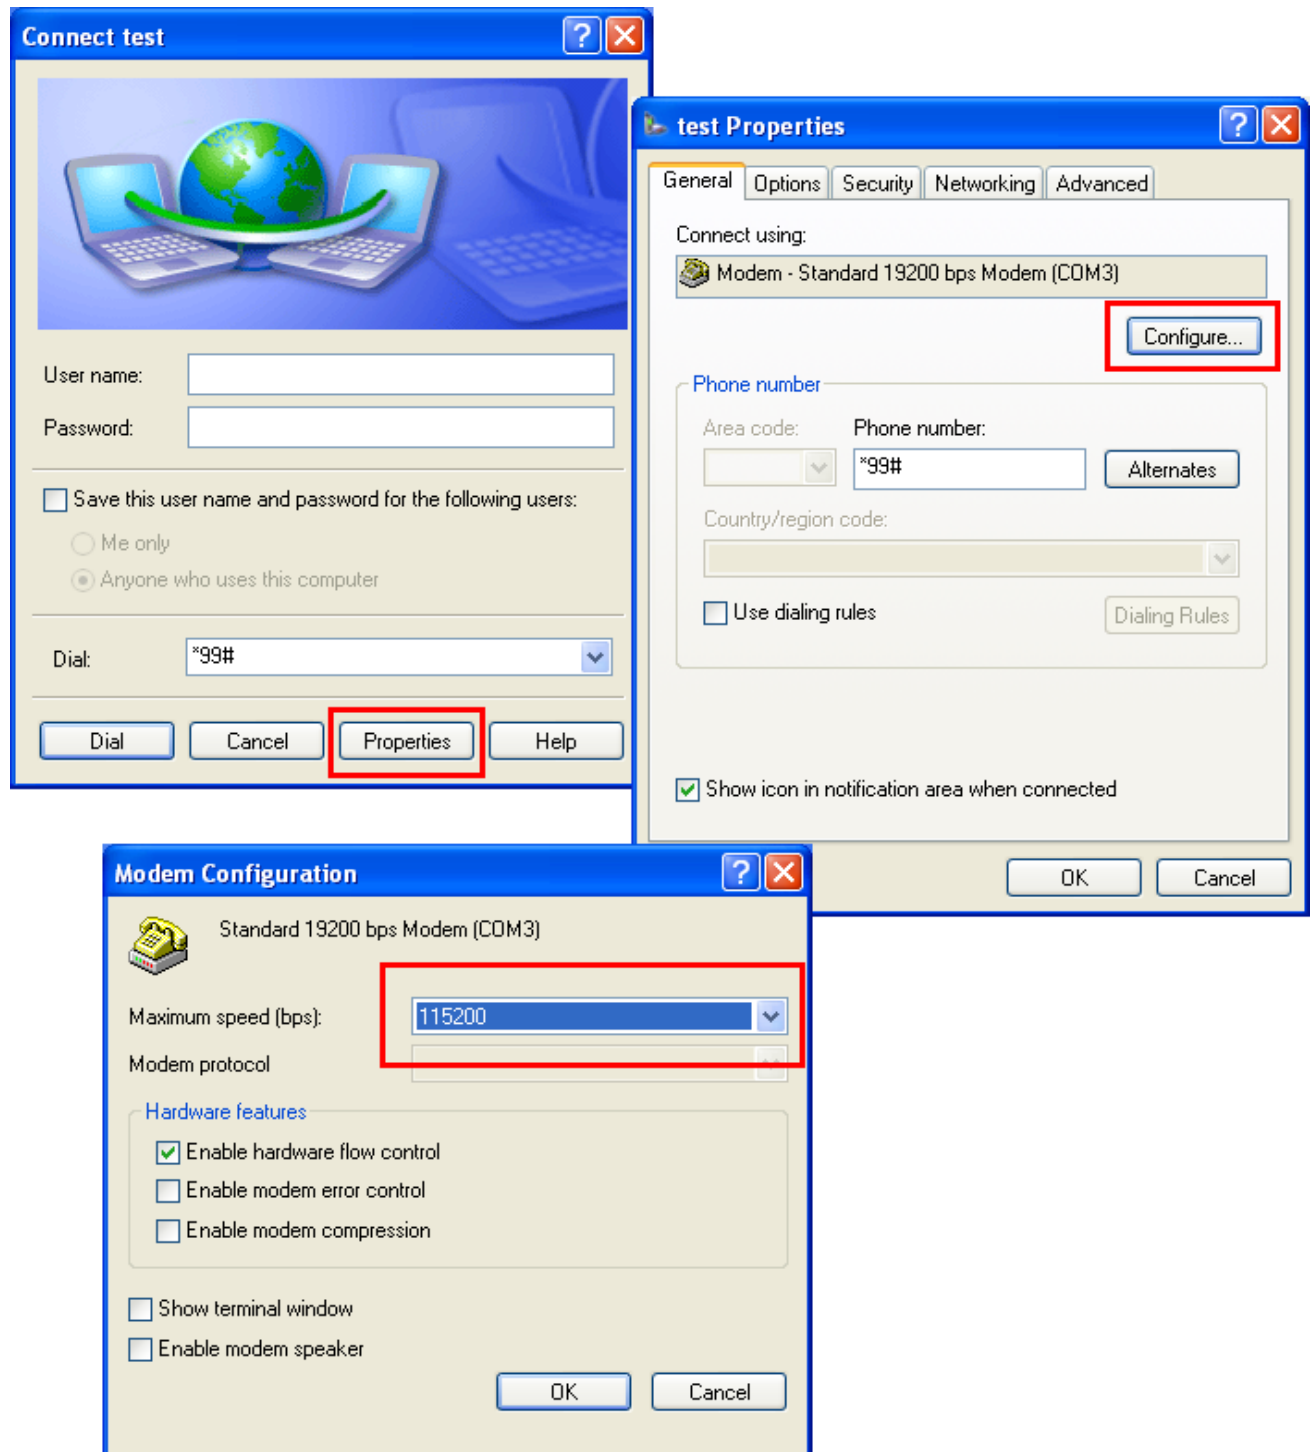


Figure 13: Configure the Dial-up Tool

5.3.4. Establish the Dial-up Connection

Right click “test” which was created as the new connection and then click “Connect” → “Dial” from network connections. The dial-up connection is established successfully when the prompt box “test is now connected” is popped up. Refer to the following figure for details.

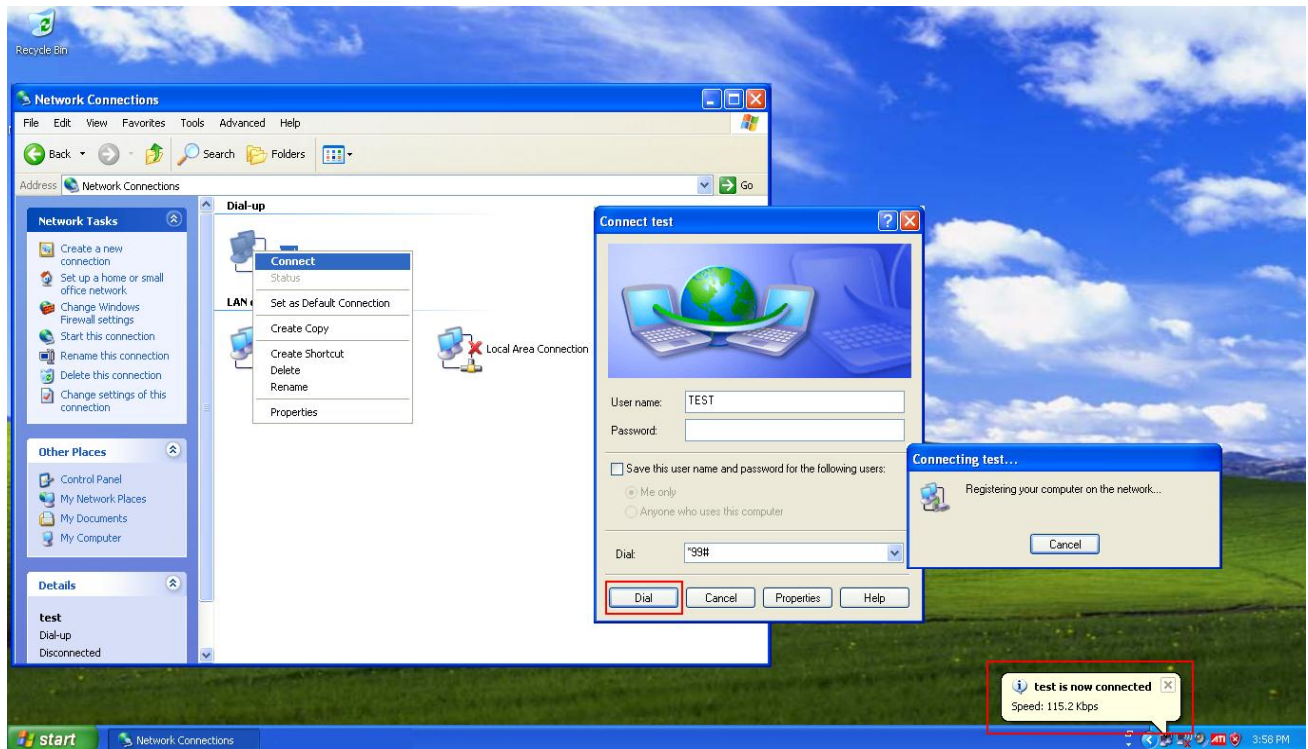


Figure 14: Establish the Dial-up Connection

6 Appendix A References

Table 1: Related Documents

SN	Document Name	Remark
[1]	Quectel_EC25&EC21_AT_Commands_Manual	EC25&EC21 AT commands manual
[2]	Quectel_EG9x_AT_Commands_Manual	EG9x AT commands manual
[3]	Quectel_EM05_AT_Commands_Manual	EM05 AT commands manual
[4]	Quectel_WCDMA<E_Linux_USB_Driver_User_Guide	WCDMA<E Linux USB driver user guide

Table 2: Terms and Abbreviations

Abbreviation	Description
APN	Access Point Name
CHAP	Challenge Handshake Authentication Protocol
DCD	Data Carrier Detection
DNS	Domain Name Server
DTR	Data Terminal Ready
GPRS	General Packet Radio Service
GSM	Global System of Mobile Communication
IP	Internet Protocol
IPCP	IP Control Protocol
LCP	Link Control Protocol
MCU	Micro Control Unit

MS	Mobile Station
PAP	Password Authentication Protocol
PDP	Packet Data Protocol
PIN	Personal Identification Number
PPP	Point-to-Point Protocol. The Point-to-Point Protocol is designed for simple links which transport packets between two ports. These links provide full-duplex simultaneous bi-directional operation, and are assumed to deliver packets in order. It is intended that PPP provides a common solution for easy connection of a wide variety of hosts, bridges and routers.
RI	Ring Indicator
TA	Terminal Adapter
TE	Terminal Equipment
UART	Universal Asynchronous Receiver Transmitter
(U)SIM	(Universal) Subscriber Identity Module